



1501 Industrial Way North, Toms River, NJ 08755
Phone: (732) 349-2109 • Fax: (732) 244-0867

PART #21115

2005-2007 C6 SLP Blackwing Induction System

PACKING LIST

Before installation, use this check list to make sure all necessary parts have been included.

ITEM	QTY	CHECK	PART NUMBER	DESCRIPTION
1.	1	<input type="checkbox"/>	200326002	Filter, Blackwing
2.	1	<input type="checkbox"/>	200015841	Intake Tube
3.	1	<input type="checkbox"/>	200097051P	Bracket, C6 Intake, Black Coated
4.	2	<input type="checkbox"/>	25176248	Grommets, Blackwing, C6 Intake
5.	2	<input type="checkbox"/>	940069797	Binding Barrel, 1/4-20 X 5/16"
6.	2	<input type="checkbox"/>	940706795	Screw, 1/4-20X3/8" Flat Head
7.	2	<input type="checkbox"/>	940020600	Bolt, Hex Head, M6X1.00X20
8.	2	<input type="checkbox"/>	940020601	Washer, Flat, M6
9.	1	<input type="checkbox"/>	25180042	Adapter, Tube, MAF to Intake Tube
10.	1	<input type="checkbox"/>	308707500	Worm Clamp
11.	1	<input type="checkbox"/>	*****	Instructions

WARNING: SLP Recommends wearing safety glasses for the complete installation.

WARNING: Too avoid the chance of electrical shock or damage to your vehicle's electrical system, disconnect both the negative and positive batter leads (in that order) at the battery.

Installation Instructions

1. Remove the stock air boxes and duct from the inlet of the MAF sensor forward.
2. Install the 2 Binding Barrels with flat head screws onto the supplied flat black bracket as shown in the photo 1 below.



PHOTO 1

3. Next install the mounting plate with binding barrels toward the bottom of the vehicle as shown in photo 2 below with the supplied 6mm screws and washers.

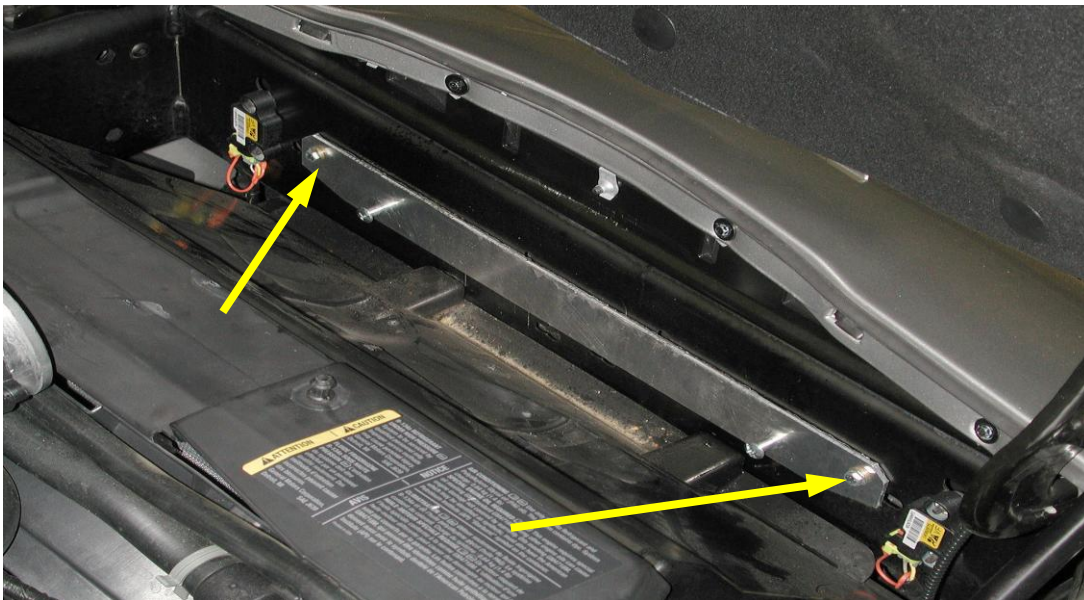


PHOTO 2

4. Next install the rubber grommets supplied into the SLP Blackwing filter as shown in photo 3 below.



PHOTO 3

5. Next install the new SLP Blackwing filter onto the mounting plate as shown in photo 4 below. If needed spray the rubber grommets with WD-40 so that they can slide onto the binding barrels without a struggle.



PHOTO 4

6. Next install the supplied cuff clamp onto the outlet of the SLP Intake Duct. The duct is to insert into the split end of the cuff clamp so that the rubber from the cuff clamp is both in the inner diameter and outer diameter of the SLP intake duct. See photo 5 below.



PHOTO 5

7. Install the air bridge onto the MAF and into the SLP filter. Be sure the clamp is over the SLP Filter outlet before you insert the air bridge. Tighten all clamps. The finished installation should look like photo 6 below.



PHOTO 6

8. The installation is now complete. If any technical help is needed please call **SLP at 732-349-2109.**