

2010 Camaro Resonator Delete Kit

PACKING LIST

Before installation, use this checklist to make sure all necessary parts have been included.

ITEM	CHECK	PART NUMBER	QTY	DESCRIPTION
1.	<input type="checkbox"/>	310301044	2	Muff Replacement Pipe, 2010 Camaro, 3" in/out
2.	<input type="checkbox"/>	308940020	4	Clamps, Torca, 3", Band
3.	<input type="checkbox"/>	*****	1	Instructions


WARNING: SLP Recommends wearing safety glasses for the complete installation.

WARNING: SLP Recommends allowing the vehicle to cool (not running) for five hours before beginning installation.

INSTALLATION INSTRUCTIONS – #30222

Installation Instructions

1. Raise and support the vehicle. A vehicle lift is recommended for this installation.
2. With the aid of a helper or jack-stand, remove the exhaust assembly up to the X-Pipe. Spraying the rubber isolators with WD-40 will make removal easier.
3. Place new Torca clamps onto the inlet ends of the straight pipe sections and insert onto the X-Pipe. Do not tighten all the way.
4. Place a new Torca clamp onto both the driver and passenger's side under axle pipes and place onto straight pipes. A Few Sprays of WD-40 on the hangers may make installation easier. See Figures 1 and 2.

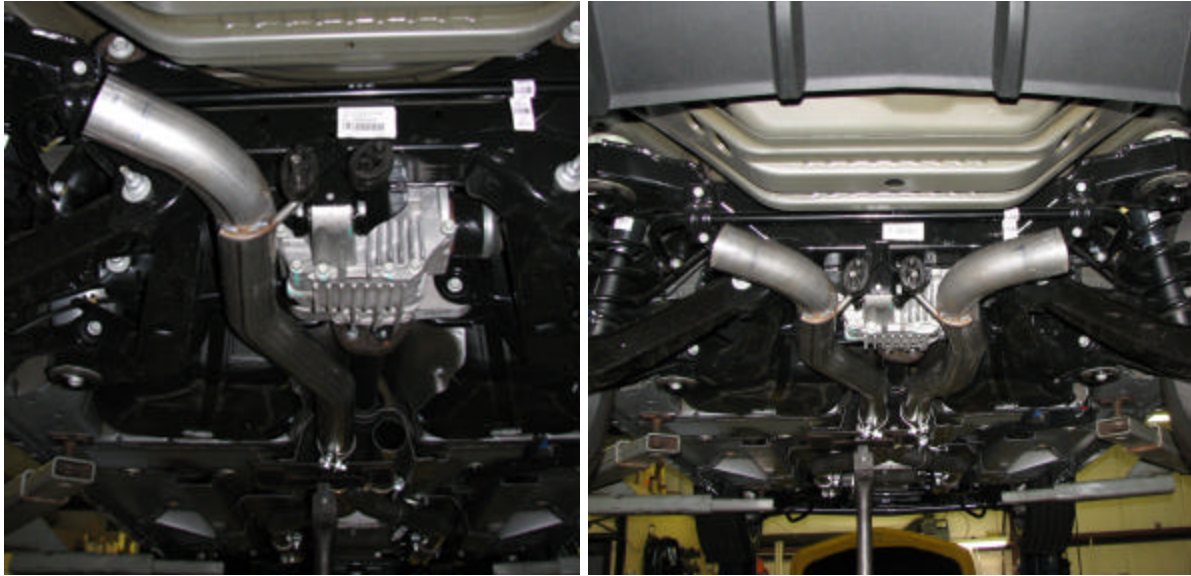

Figures 1 and 2: Under axle pipe installation

5. Follow directions for installation of an SLP axle-back exhaust before tightening any clamps down. You must check for adequate clearances and adjust as necessary. Clamps should always be tightened down in multiple passes starting from front to back.
6. Start the vehicle and inspect for leaks.
7. Double check all fasteners and clearances after test driving. Adjust as necessary.
8. The installation is complete. Enjoy!