

**Tip Assy, Silverado/Sierra, 2007-10 900 Series,**  
**CC/SB, EC/6.5B 5.3L**

**PACKING LIST**

*Before installation, use this check list to make sure all necessary parts have been included.*

ITEM	QTY	CHECK	PART NUMBER	DESCRIPTION
1.	1	<input type="checkbox"/>	310011795	Adapter Pipe, 45 Degree, 2.75" Inlet, 2.5" Outlet, Dual Tip
2.	1	<input type="checkbox"/>	310301853	TIP ASSY, TRUCK, DUAL OUTLET
3.	1	<input type="checkbox"/>	308144380	Clamps, Torca, 2.5"
4.	1	<input type="checkbox"/>	10271	Clamps, Torca, 2.75"
5.	1	<input type="checkbox"/>	*****	Instructions

**WARNING:** SLP Recommends allowing the vehicle to cool (not running) for five hours before beginning installation.


**INSTALLATION INSTRUCTIONS – #31093**

- 1 Begin the install by measuring 1.75" rearward from the factory exhaust hanger on the tailpipe and make a clear mark, then cut off the factory pipe. Slide the SLP adapter pipe over the factory pipe with the supplied 2.75" Torca clamp on the SLP pipe, see Photo 1 below



**Photo 1: Stock Pipe Removed from Vehicle**

- 2 Install the tip onto the SLP pipe with 2.5" Torca clamp and then tighten all clamps after adjusting the system as desired. See Photo 2 Below.

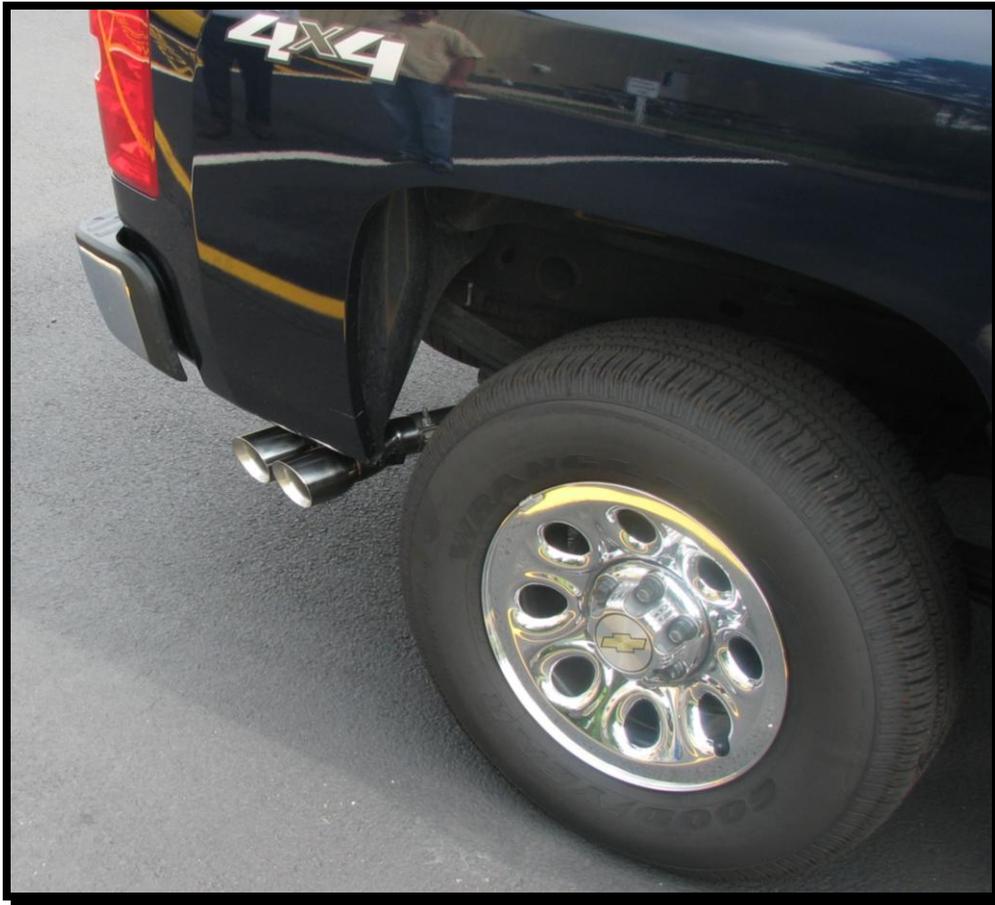

**Photo 2: Finished and Installed**

- 3 The installation is now complete! ENJOY!