

Dual Tip Tailpipe Assembly, 2007-10 Yukon Denali

PACKING LIST

Before installation, use this checklist to make sure all necessary parts have been included.

ITEM	QTY	CHECK	PART NUMBER	DESCRIPTION
1.	2	<input type="checkbox"/>	308144788	Clamp, Exhaust, 3.5" Duraseal
2.	1	<input type="checkbox"/>	310301859	Tip, 6.2L SUV P-Side
3.	1	<input type="checkbox"/>	310311788	Axle Back Pipe w/ Hanger 6.2L Yukon Denali
4.	1	<input type="checkbox"/>	*****	Instructions

WARNING: SLP Recommends allowing the vehicle to cool (not running) for five hours before beginning installation.

INSTALLATION INSTRUCTIONS – #31096

- 1 Begin the install by measuring 1 ½" rearward from the clamp mark shown in below photo. Make a clear mark, and then cut off the factory pipe, See Photo 1 below.



Photo 1: Stock Pipe Removed from Vehicle

- 2 Slide the SLP adapter pipe over the factory pipe with the supplied 3.5" Torca clamp on the SLP pipe. Insert hanger on SLP pipe into stock rubber isolator. Install the tip onto the SLP pipe with 3.5" Torca clamp and then tighten all clamps after adjusting the system as desired. See Photo 2 & 3 Below.

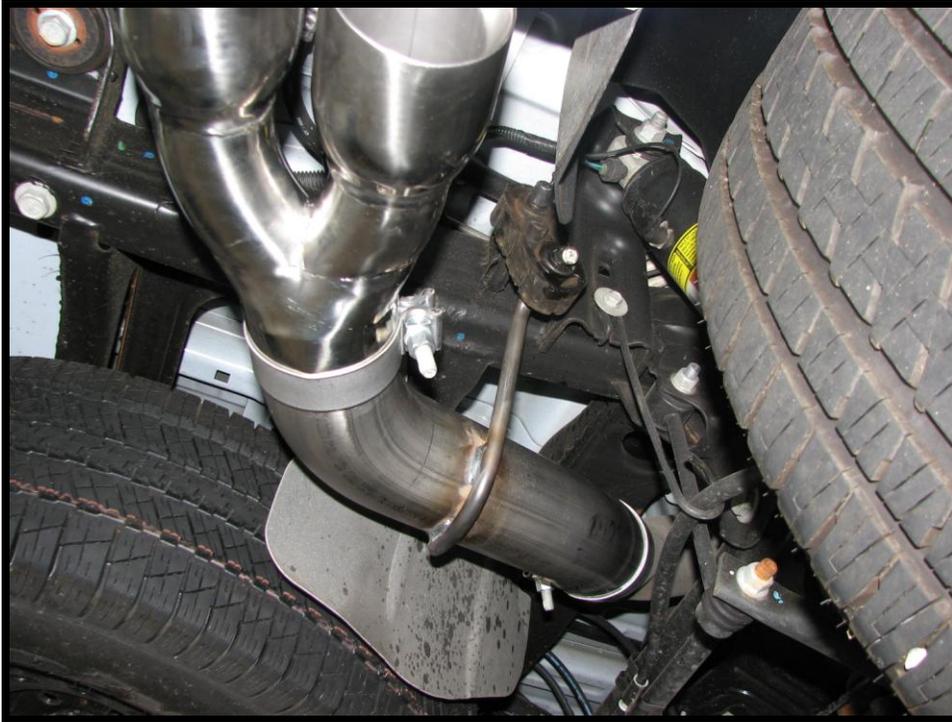


Photo 2: Finished and Installed



Photo 3: Finished and Installed

- 3 The installation is now complete! ENJOY!