

Dead Pedal, CK Truck, SUV

PACKING LIST

Before installation, use this check list to make sure all necessary parts have been included.

ITEM	QTY	CHECK	PART NUMBER	DESCRIPTION
1.	1	<input type="checkbox"/>	401100049B	Dead Pedal Plate, anodized
2.	3	<input type="checkbox"/>	940080795	bolt, 1" x 1/4x20
3.	3	<input type="checkbox"/>	010570420	nut, 1/4x20
4.	3	<input type="checkbox"/>	300868014	lock washer, 1/4" ID
5.	3	<input type="checkbox"/>	940868401	washer, 1.25" OD .28" ID
6.	20"	<input type="checkbox"/>	305380401	grip tape, 1" wide
7.	1	<input type="checkbox"/>	200811110	Drill template
8.	1	<input type="checkbox"/>	***	Instructions

INSTALLATION INSTRUCTIONS – #40110

1. Remove the driver's side kick panel from the vehicle. There are no screws holding it in place, only clips.
2. Cut out the supplied hole template and tape to the inside of the kick panel as shown in Figure 1. Be sure to line up the edges of the template to the edges of the part.

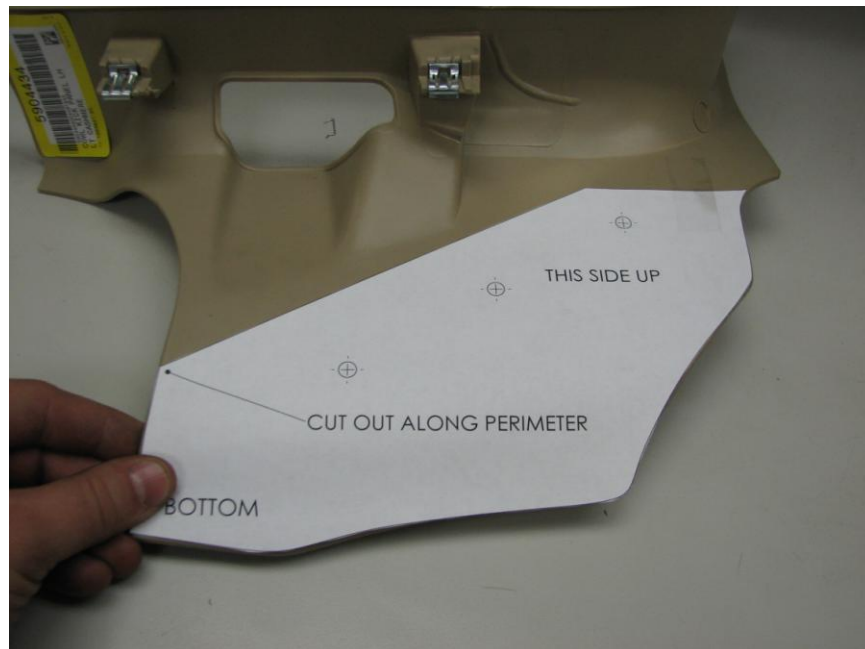


Figure 1: Dead pedal hole template

3. Mark the centers of the holes on the part (using a center punch or other tool). Drill out the three holes you just marked with a 0.25" bit.
4. Cut the supplied grip tape into 2 – 6 1/4" and 2 – 3 1/8" strips. Round the corners. Place strips on top of dead pedal as shown below in Figure 2.



Figure 2: Grip tape placement

5. Insert the bolts through the large washers and feed them through the inside of the kick panel as shown in Figure 3.



Figure 3: Bolts with washers through kick panel

6. Insert the dead pedal onto the 3 studs followed by a lock washer and nut. Tighten all 3 bolts and nuts. The pedal should sit as shown in Figures 4 and 5.



Figure 4: Dead pedal mounting



Figure 5: Dead pedal mounting

7. Install the kick panel back into the vehicle the same way you removed it. Be sure to snap it in place completely. The finished installation should look like Figure 6.



Figure 6: Finished installation